


Teaching

Adjust emissivity value of PT-U80 to Target's Emissivity

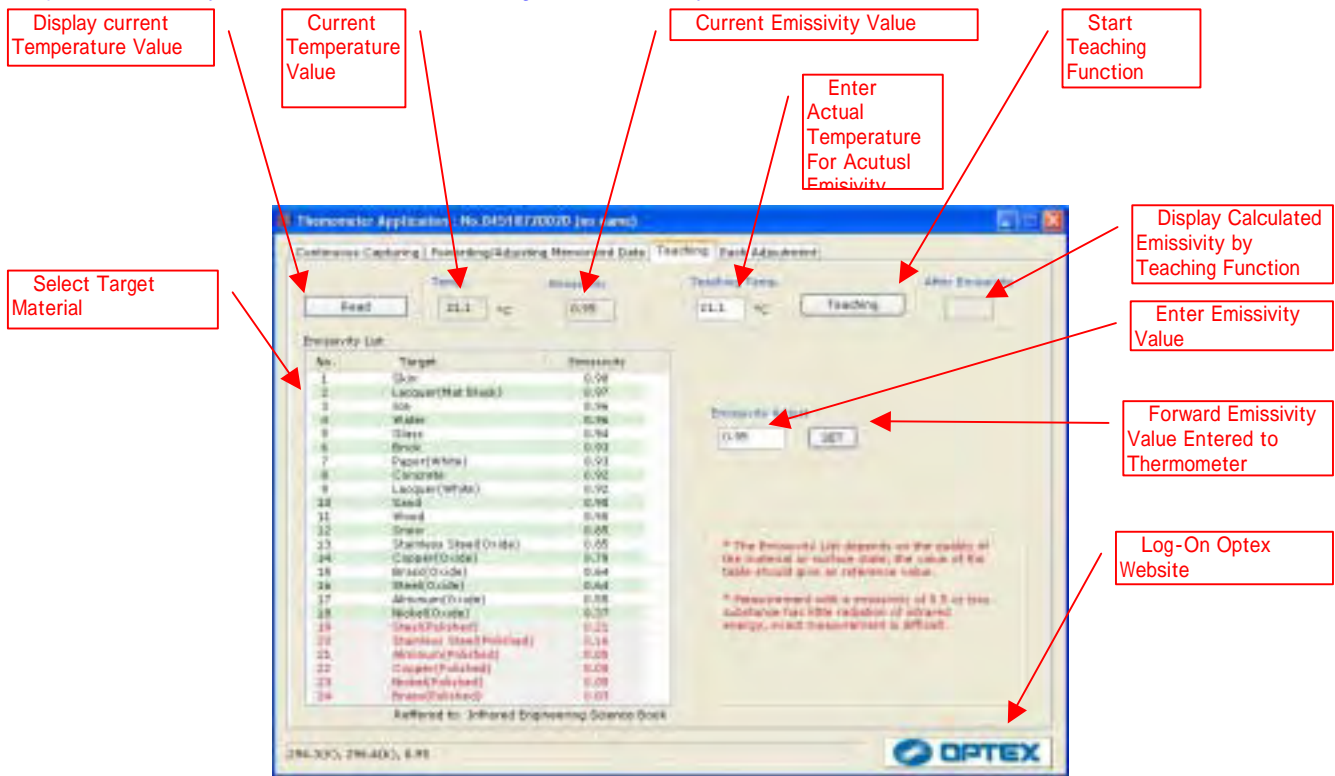

Sample) Actual emissivity is automatically selected if target's actual temperature is known

- 1) Connect PT-U80 to PC then activate "THERMO HUNTER" program
 - 2) Select "Teaching" on TAB
 - 3) Measure target temperature using PT-U80
 - 4) Input target's actual temperature value into Blank 4
 - 5) Push button 5 for the actual emissivity value. The actual emissivity value appears on Blank 6 temperature.
- indicated in 2.

Sample) If the target's material is known, select such target material to meet actual emissivity

- 1) Connect PT-U80 to PC then activate "THERMO HUNTER" program
- 2) Select "Teaching" on TAB
- 3) Select Target's material from 9 then click it.
- 4) An actual emissivity value of target's material appears on 7
- 5) Push 8 to forward actual emissivity value to PT-U80

TASHIKA BOEKI SHOKAI K.K.

1-12, Kaiyo-cho, Ashiya, 659-0035, JAPAN

Tel: + 81-797-23-9035 Fax: + 81-797-23-2105

e-mail: sales@tashika.co.jp URL: www.tashika.co.jp